


## Machine operation

Additional information (including troubleshooting and service) can be found in the individual sections of the Instructions For Use.

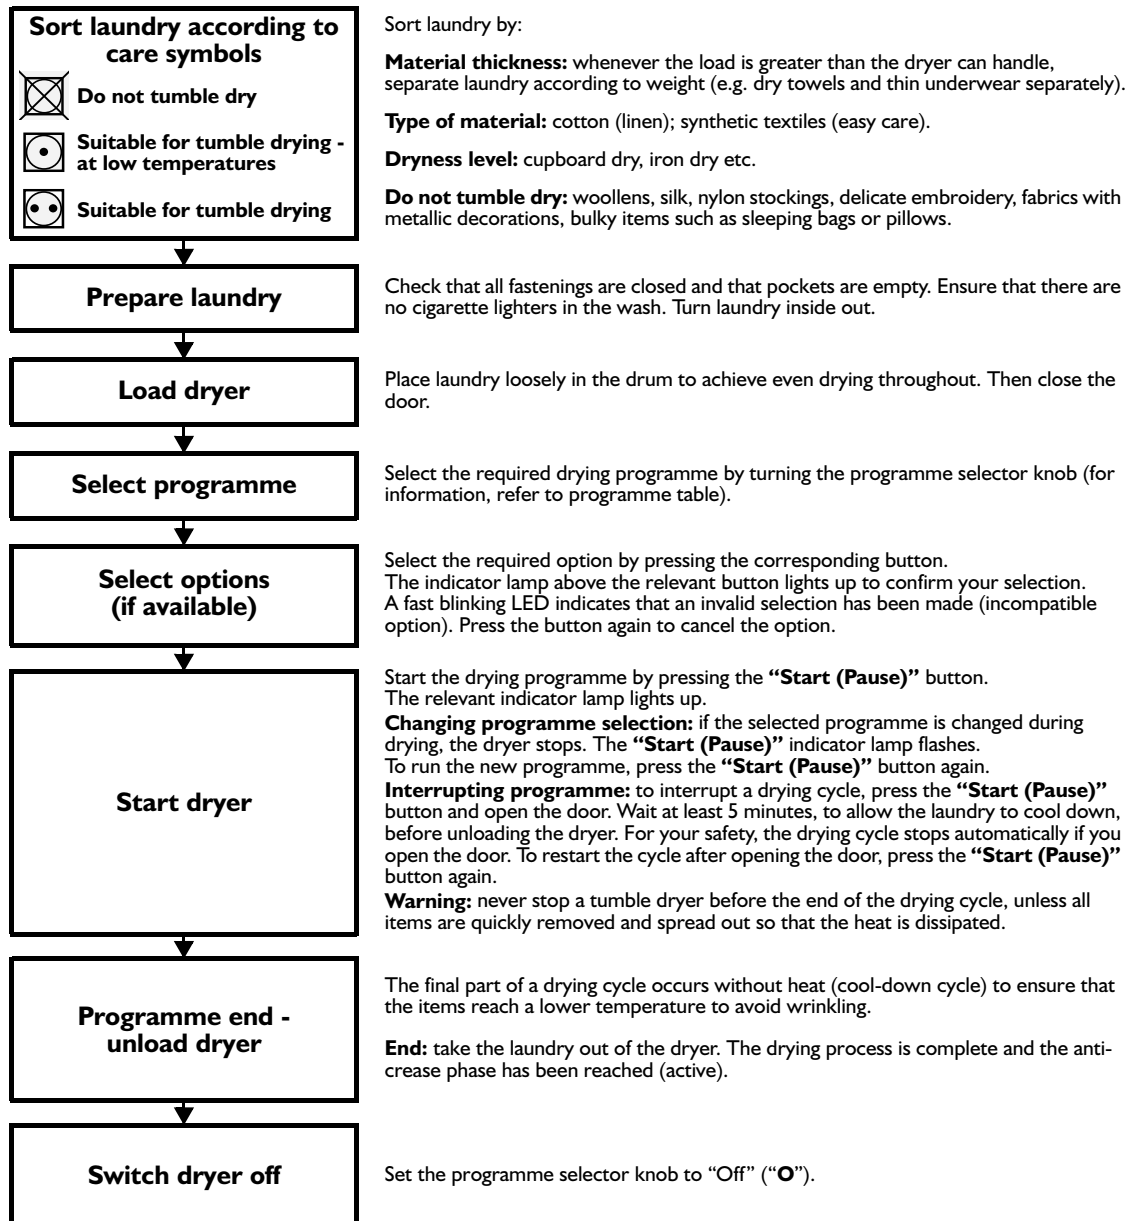




 
 




 



 




Set the programme selector knob to **“Off” (“O”)**.

**Cleaning the lint filter:** open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close lint filter and push firmly back into place (more detailed informations are given in the Instructions For Use).

**Emptying the water container:** pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

**Please note:** only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

Overview of programmes												
Programmes / Drying levels				Type of textile	Fabrics	Volume of load kg*	Options					
							Gentle	Anti-crease	Buzzer	Start delay	Very wet load	Wet load
		Extra dry	Multi-layered, thick laundry such as: terry towels, terry towelling bath robes.	Cotton or linen hot wash/coloured laundry  Max. 8 kg	3.0 8.0	X	X	X	X	X	75' 185'	65' 160'
		Cupboard dry +	Terry towels, dry towels, bed linen, underwear.		3.0 8.0	X	X	X	X	X	70' 165'	60' 140'
		Cupboard dry **	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear; baby clothes, T-shirts, cotton socks.		3.0 8.0	X	X	X	X	X	65' 140'	55' 120'
		Iron dry **	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		3.0 8.0	X	X	X	X	X	50' 115'	40' 100'
		Extra dry	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry  Max. 4 kg	1.0 4.0	X	X	X	X	X	35' 90'	25' 65'
		Cupboard dry **	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		1.0 4.0	X	X	X	X	X	25' 60'	20' 45'
		Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		1.0 4.0	X	X	X	X	X	20' 55'	15' 40'
		Delicate plus	Low drying intensity for delicates and items such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres  Max. 2.5 kg	2.5	X	X	X	X	X	85'	70'
		Mixed load	T-shirts, blouses, towels, underwear, sportswear.	Cotton - Synthetic blend  Max. 3 kg	3.0	X	X	X	X	X	80'	60'
Airing	Laundry is aired, refreshed and loosen up for 30 minutes without heating.			All textiles.		—	—	—	X	—	—	—
Drying times	30' 40' 60' 90'			Additional drying time for textiles that are not suitable for other programmes, or for finalisation of the drying process.	All fabrics 	—	X	X	X	—	30' 40' 60' 90'	—

\* Weight of average and maximum load.

\*\* Test programmes according to EN 61121, tested with maximum rated load capacity.

## How to proceed if...

**...you want to check the dryer yourself first:** (If your machine is not functioning correctly, please check the following points before calling the Customer Service department - also refer to relevant section in the Instructions For Use).








<b>Drying takes too long/ Laundry is not dry enough</b>	→	<ul style="list-style-type: none"> <li>• Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)?</li> <li>• Is the lint filter dirty? (filter indicator light on)</li> <li>• Is the heat exchanger dirty? (for more information, refer to the Instructions For Use)</li> <li>• Is the room temperature too high?</li> <li>• Are the “End” and “Anti-crease” indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.</li> <li>• If the drying result does not meet your expectation, select a drier programme or use the dryness adjustment option (if available).</li> <li>• Are thin and thick laundry mixed? Are different types of materials mixed? Sort the laundry by thickness and material, then dry it again.</li> </ul>
<b>The dryer does not operate (after a power failure, always press the “Start (Pause)” button)</b>	→	<ul style="list-style-type: none"> <li>• Is the plug properly inserted into the mains electricity socket?</li> <li>• Is there a power failure?</li> <li>• Has the fuse blown?</li> <li>• Is the door properly closed?</li> <li>• Has a drying programme been selected?</li> <li>• Has the “Start (Pause)” button been pressed?</li> <li>• Has the start delay option been selected?</li> <li>• Is the dryer overloaded? → Please remove some of the load.</li> </ul>
<b>Lint filter, water container or heat exchanger indicator lamp on</b>	→	<ul style="list-style-type: none"> <li>• Is the lint filter clean?</li> <li>• Is the water container empty?</li> <li>• Has the water container been inserted correctly?</li> <li>• Is the heat exchanger clean and inserted correctly?</li> </ul>
<b>Water droplets underneath the dryer</b>	→	<ul style="list-style-type: none"> <li>• Has the heat exchanger been inserted correctly?</li> <li>• Has all lint on the heat exchanger seal and the door seal been wiped away?</li> <li>• Has the water container been inserted correctly?</li> <li>• If the direct drain connection is used, is it tight?</li> <li>• Is the dryer levelled?</li> </ul>

**...you want to care for and clean your dryer:**

<b>Clean the filter at the end of every cycle</b>	→	<ul style="list-style-type: none"> <li>• Brush lint using a soft brush or your fingertips.</li> <li>• Close the filter.</li> <li>• Push the filter back into place.</li> </ul>
<b>Empty the water container at the end of every drying cycle</b>	→	<ul style="list-style-type: none"> <li>• Pull the handle to remove the water container.</li> <li>• Empty the water container.</li> <li>• Replace the empty water container by pushing it fully back into place.</li> </ul>
<b>Clean the heat exchanger at least once a month</b>	→	<ul style="list-style-type: none"> <li>• Clean the heat exchanger under running water.</li> <li>• Remove all lint from the seals.</li> <li>• Clean the heat exchanger housing (for further information see section “Cleaning the heat exchanger” in the Instructions for Use).</li> </ul>

Failure codes
---------------

**In the event that the dryer malfunctions, one of the following failure codes may be displayed. Depending on the model of your dryer, the failure may be displayed in letters or by different blinking LEDs.**

Failure code	LED failure code	Check to be carried out by customer before service call
<b>F01</b>		Please call the After-Sales Service.
<b>F02</b>		Please call the After-Sales Service.
<b>F03</b>		Please call the After-Sales Service.
<b>F04</b>		Please call the After-Sales Service.
<b>F05</b>		Turn the dryer OFF and unplug it. Make sure that the ambient temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>F06</b>		Turn the dryer OFF and unplug it. Make sure that the ambient temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>F07</b>		Please call the After-Sales Service.
<b>F10 - 15</b>	Turn the dryer OFF and unplug it. Wait for 5 minutes. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.	
<b>F18</b>	Turn the dryer OFF and unplug it. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.	
<b>F19</b>	Turn the dryer OFF and unplug it. Wait for 5 minutes. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.	
<b>F20</b>	Turn the dryer OFF and unplug it. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.	
<b>F21</b>	Turn the dryer OFF and unplug it. Wait for 5 minutes. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.	
<b>F22</b>	Turn the dryer OFF and unplug it. Wait for 5 minutes. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.	
<b>Start LED blinks 2 times per second when pressed</b>	Make sure that the door is correctly closed and the heat exchanger correctly positioned. If the failure reoccurs, please call the After-Sales Service.	
<b>Heat exchanger LED blinks 2 times when Start button is pressed</b>	Make sure that the heat exchanger is correctly positioned. If the failure reoccurs, please call the After-Sales Service.	



- LED not blinking



LED blinking



**AZB 8670**

## Quick Reference Guide



### Indicator lamps



#### Programme selector knob

The drying programme is selected by turning this knob. The **“Start (Pause)”** indicator lamp flashes.



#### “Start (Pause)” button

The drying programme is started by pressing this button. The indicator lamp lights up.



#### Filter

The indicator lamp lights up when the filter and/or the heat exchanger and its housing need to be cleaned.

**Clean the filter at the end of every drying cycle.**



#### Water container

The indicator lamp lights up when the water container needs to be emptied. The drying cycle is automatically interrupted. Empty the container and restart the drying programme.

**Empty the water container after every drying cycle.**



#### Clean heat exchanger

The LED lights up after 30 cycles when the heat exchanger needs to be cleaned. After the heat exchanger has been cleaned, the indicator lamp will switch off automatically when the next drying cycle is started.



#### “Remaining time” display

Depending on the selected programme, a default drying time is displayed. After the start of the cycle, the displayed time is corrected depending on the volume, type and moisture level of the laundry.

**The specified drying time is a calculated value which will be updated during the drying cycle.**

The flashing lines indicate that the calculation is in progress. The remaining time will be updated.

#### End

The drying programme is finished. Please unload the dryer.



#### Overdry protection / 6<sup>th</sup> Sense

The indicator lights up when a humidity controlled programme is selected, to indicate the activated protection function.

#### Key lock

For child safety, this option can be used to lock all functions of the user interface.



To activate/deactivate this option, the button must be pressed for 3 seconds. The only remaining function available is the “Off” position of the programme selector knob.

The key lock function remains active even when the selector knob is turned to the “Off” position or the door is opened. The function must be deactivated manually.



### **Gentle**



Selecting this option will reduce the drying temperature. This option cannot be selected when the “Rapid” option is selected (if available).



### **Anticrease**



This option can be chosen to reduce wrinkling, when the laundry is not unloaded immediately after the end of the cycle. The drum turns from time to time for up to 12 hours. It can be interrupted at any time by switching off the dryer. This option deactivates the “Buzzer” function, if it is activated.



### **Drum light**

The drum light can be switched on and off.



### **Buzzer**

When this option is pressed, a buzzer will indicate the end of the drying cycle. This option deactivates the “Anticrease” function, if it is activated.



### **Start delay**

Delays the start of the drying cycle by 1 to 12 hours. Each time the button is pressed, the start time is delayed by 1 hour. Press the “**Start (Pause)**” button to confirm the final selection and to start the dryer. The “.” in the window flashes and the time is counted down in 1-hour intervals. During the countdown, the drum will turn from time to time to redistribute the laundry and the pump will start to pump water into the water container. To cancel or change the previously set time delay, set the index of the programme selector knob to the “Off” position, or open the door.

**5019 307 01436**

(Subject to technical modifications)